


Installing a Wildtronics Micro Mic PIP in a Wildtronics All Purpose Parabolic

Installing the Micro Mic PIP into an All Purpose Parabolic is very easy. Follow the pictured steps below. The parabolic dish is not in the pictures for better illustration. For more information, refer the All Purpose Parabolic Manual.

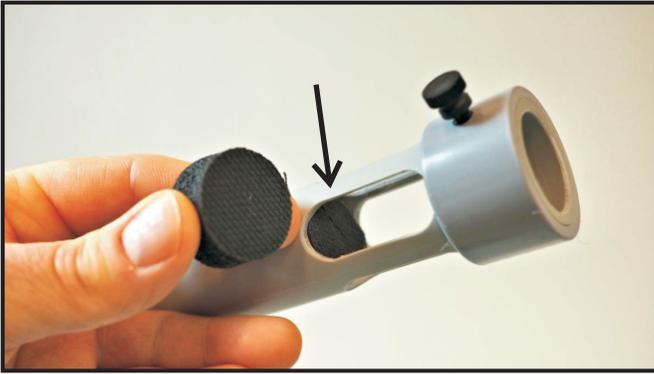

Step 1. Insert one of the foam cable clamps inside the Mic Tube as shown. This prevents resonance from the tube from affecting the microphone.



Step 2. Insert the Micro Mic PIP into the Mic Tube, wind screen first, until the O-ring is seated against the Mic Tube.



Step 3. Clamp the Micro Mic PIP in place by tightening the nylon thumbscrew.



Step 4. Slide on the Windscreen, starting from the end opposite the Micro Mic PIP, until the large end touches the thumbscrew. Attach the 3.5mm cable.




Step 5. Thread the 3.5mm cable through the cable slot of the Mic Tube.




Step 6. Install one of the included O-rings onto the Mic Tube, at the location shown, to retain the 3.5mm cable.



Step 7. Wrap the second Foam Cable Clamp around the 3.5mm cable and insert into the Mic Tube end. This secures the cable.

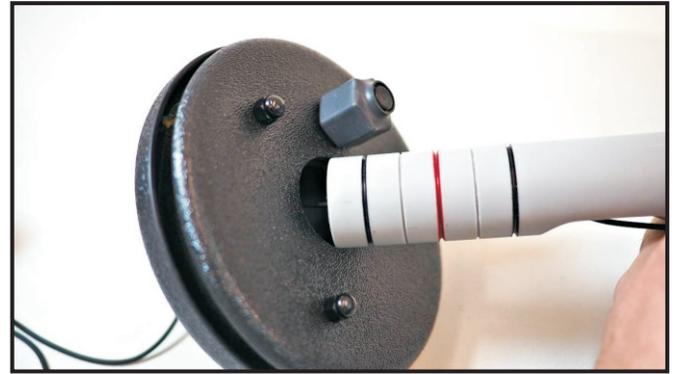

Step 8. Install the Mic Tube into the Front Plate and Back Plate that you have assembled to the parabolic dish.

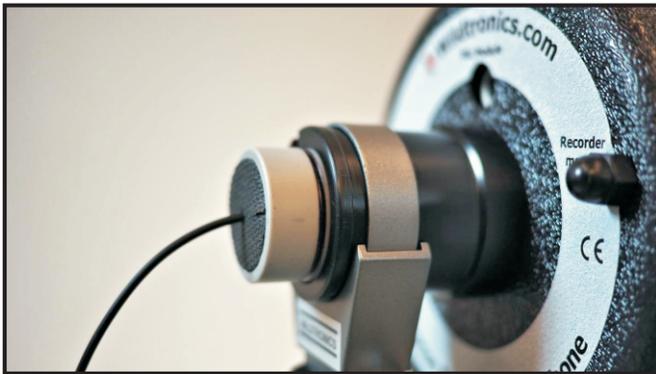

Step 9. Insert the Mic Tube so that the first black ring of the focus gauge is flush with the back of the clamp hub, as shown. Your mic is now at the focal point of the parabolic dish. Tighten the handle clamp.



Step 10. Your assembly is now complete and should look like this, except your parabolic dish would be installed.



Wildtronics, LLC • PO Box 376 • Newton Falls, OH 44444 • USA
Phone: +1 (330) 577-8814 • Website: www.wildtronics.com